

Trouble Shooting Guide

Guide des Codes Erreurs

WIM-XX216.LHE

R410a



Updated on: 19 NOV 15

Trouble Shooting Guide – Guide des Codes Erreurs WIM-XX216.LHE INDOOR UNIT – UNITE INTERIEURE

| Operation lamp | Timer lamp | Display | LED STATUS |
|----------------|------------|---------|--|
| ☆ 1 time | X | E0 | Indoor unit EEPROM parameter error |
| ☆ 2 times | X | E1 | Indoor / outdoor units communication error |
| ☆ 4 times | X | E3 | Indoor fan speed has been out of control |
| ☆ 5 times | X | E4 | Indoor room temperature sensor T1 open circuit or short circuit |
| ☆ 6 times | X | E5 | Evaporator coil temperature sensor T2 open circuit or short circuit |
| ☆ 7 times | X | EC | Refrigerant leakage detection |
| ☆ 1 times | O | F0 | Overload current protection |
| ☆ 2 times | O | F1 | Outdoor ambient temperature sensor T4 open circuit or short circuit |
| ☆ 3 times | O | F2 | Condenser coil temperature sensor T3 open circuit or short circuit |
| ☆ 4 times | O | F3 | Compressor discharge temperature sensor T5 open circuit or short circuit |
| ☆ 5 times | O | F4 | Outdoor unit EEPROM parameter error |
| ☆ 6 times | O | F5 | Outdoor fan speed has been out of control |
| ☆ 1 times | ☆ | P0 | IPM malfunction or IGBT over-strong current protection |
| ☆ 2 times | ☆ | P1 | Over voltage or over low voltage protection |
| ☆ 3 times | ☆ | P2 | High temperature protection of compressor top diagnosis and solution |
| ☆ 5 times | ☆ | P4 | Inverter compressor drive error |

O (light)

X (off)

☆ (flash)